


1. Connect the E41 vehicle unlock cable inline with the OBD cable. Connect OBD cable to vehicle OBD port.
2. Remove the following fuse depending on the model year truck. Connect the long wire to the side of the fuse marked below.


2020+ Model Year, Fuse 78

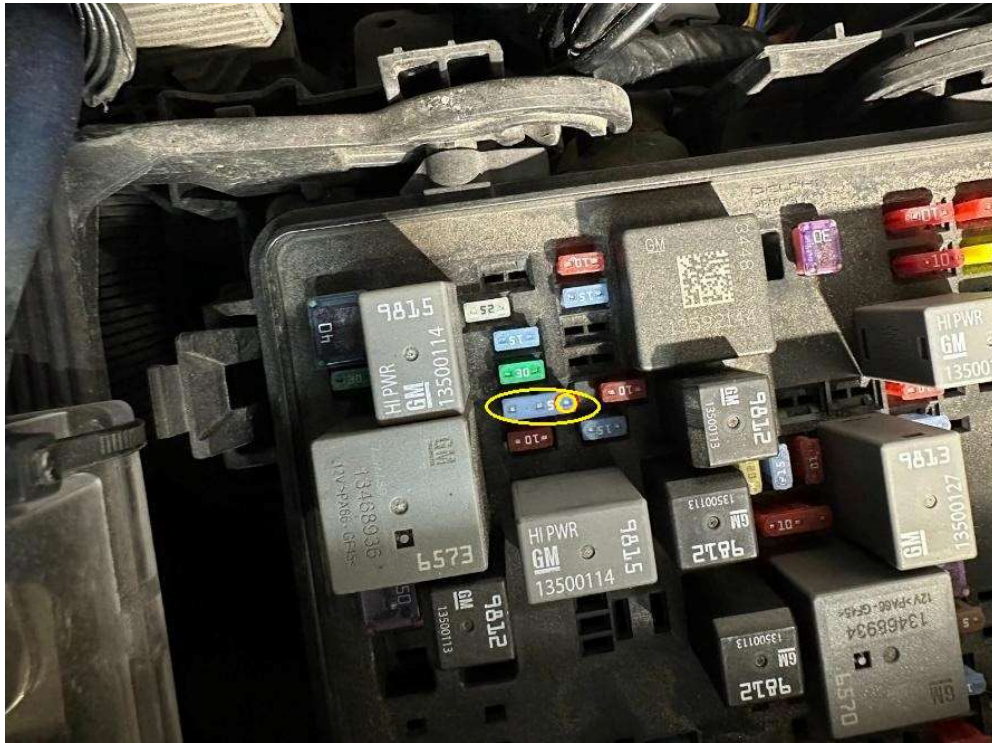


17-19 Model Year, Fuse 57




3. Change the OEM to GM in the software

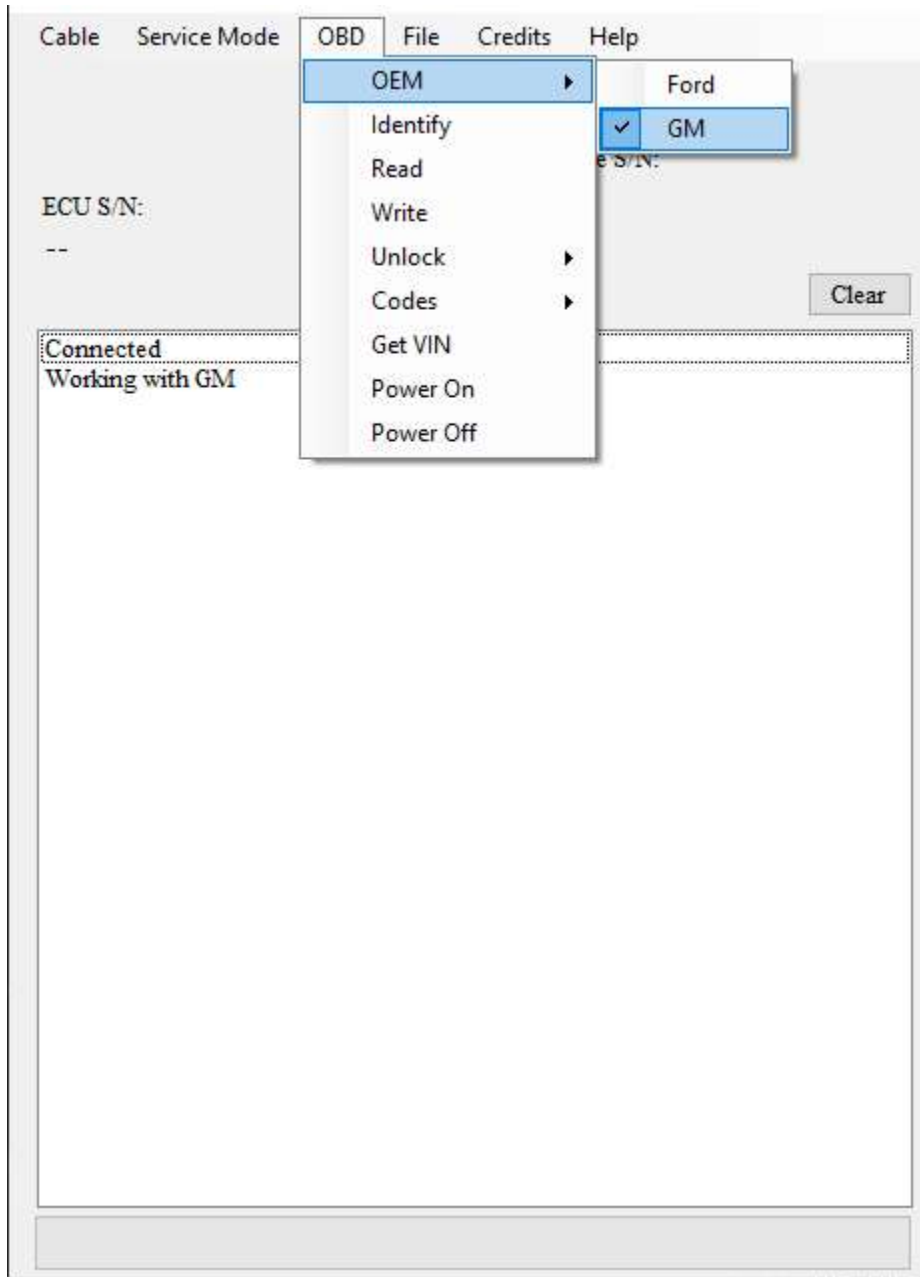

4. Select Perform Unlock

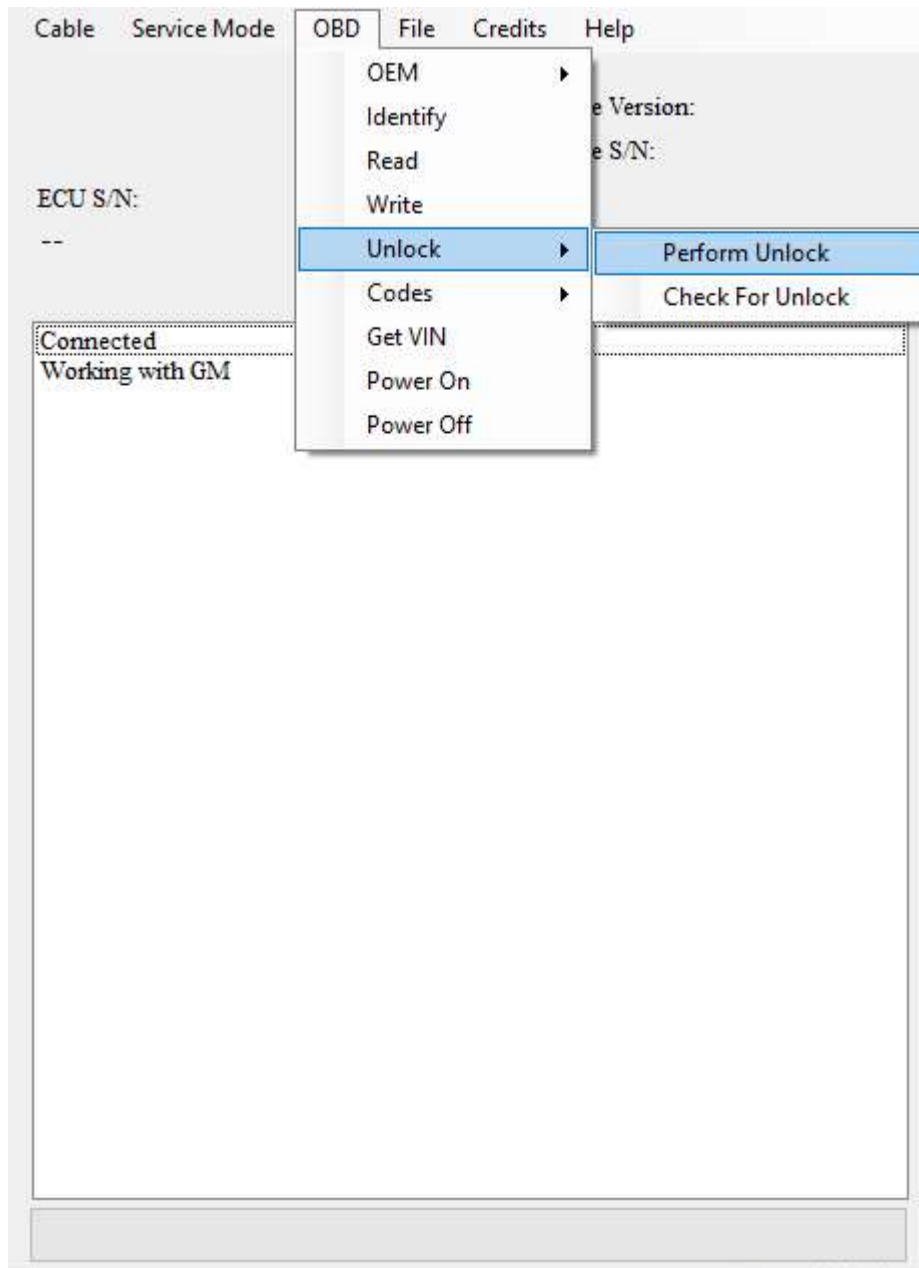

Unlock Process

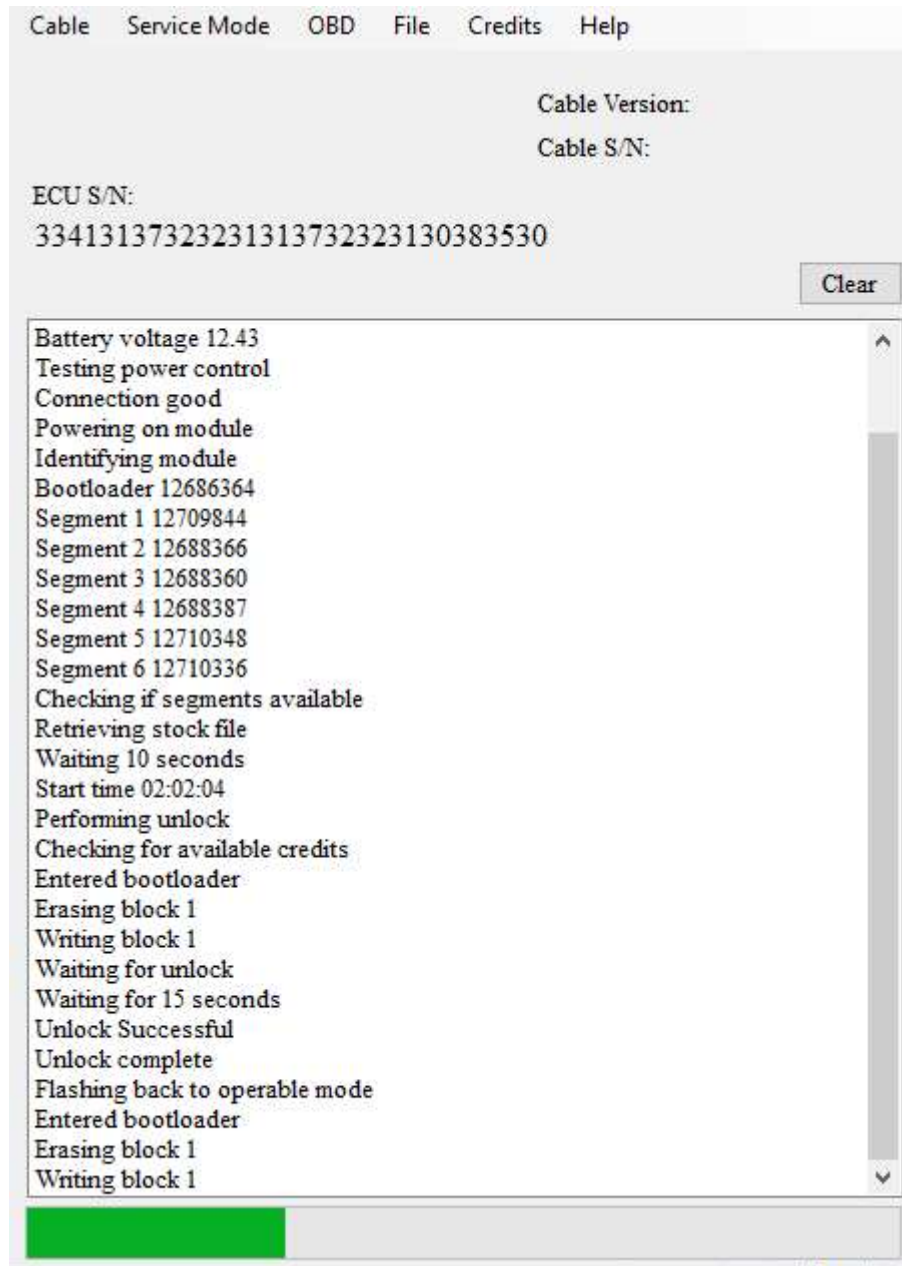

If the segments are not in the database, you can either contact tech support with the segment numbers not available or replace them with other segments. These other segments can be found on the GM tis2web site by entering your VIN.

Unavailable segments

Cable Service Mode OBD File Credits Help

Cable Version:

Cable S/N:

ECU S/N:

33413137323231313732323130383530

Clear

Connected  
Working with GM  
Working with ECU  
Battery voltage 12.40  
Testing power control  
Connection good  
Powering on module  
Identifying module  
Bootloader 12686364  
Segment 1 12709844  
Segment 2 12688366  
Segment 3 12688360  
Segment 4 12688387  
Segment 5 12710348  
Segment 6 12710336

Do you want to manually override the segments?

Yes

No

Checking if segments available

Segment 12345678 is not available. Contact Tech Support

If you have replacement segment numbers, you can enter them here

